

Aqua-eco heater

Submersible aquarium heater

User manual




Safety

1. The Aqua-eco heater has been designed to operate accurately if the ambient temperature outside the tank is 20°C or above. If the ambient temperature is lower than 20°C you need to increase the temperature setting on the heater to ensure the correct water temperature.
2. Read user manual carefully before use.
3. Only suitable for indoor use.
4. Ensure voltage shown on the label matches the mains supply voltage.
5. Do not insert the plug in the socket when the heater is not in the water.
6. Do not remove the heater from the water when the plug is in the socket.
7. Before removing the heater from the tank remove the plug from socket and let the heater cool down for 15 minutes.
8. The water level must be at least at or above the minimum water level mark on the heater.
9. Always check the temperature of the water with a thermometer. The temperature setting on the heater may vary.
10. In the event of damage to the cord or plug do not use the heater and discard it.
11. Always disconnect all power to the aquarium before placing your hands in the aquarium water.
12. In the event of the heater glass becoming cracked or leaks occurring, firstly remove the plug from the socket then remove the heater from the aquarium.
13. Cracking of the heater glass is not covered by the guarantee. It is not possible to repair cracked glass.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Special care should be taken with the use of electrical equipment by or near children.

Installation

1. Place the heater in the aquarium, attaching it to the glass using the suction cups and ensuring the heater is fully submerged as per fig 1 below and not partly submerged as per fig 2. The heater should be positioned near the filter or an air stone so that the heated water can be distributed evenly throughout the aquarium.
2. Leave the heater in the water for 5 minutes before plugging the heater into the socket. This allows the unit to adjust to the temperature of the aquarium before operation.
3. When you plug the heater into the socket take care to ensure that water or splashes of water cannot reach the socket.
4. Set the temperature indicator to the correct position by turning the dial on top of the heater into the correct position. Special care should be taken with the use of electrical equipment by or near children.

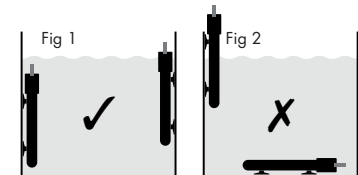

Maintenance

Dirt, lime deposits and algae can accumulate on the glass of the Aqua-eco heater. Clean the heater regularly using a sponge and a descaling agent. After cleaning, rinse thoroughly with tap water before placing back in the aquarium.

Technical Information

1. Temperature control dial
2. Indication light
3. Heating element
4. Protective casing
5. Suction cups



Model	Volume	Length
100W	0-75L	25cm
200W	75-125L	25cm
300W	125-200L	25cm

Recycle information

The symbol of the barred bin printed on the product means that it must be collected separately from other rubbish when it is no longer operational.

The user, at the end of the life of the product, will have to bring it to a proper rubbish collection centre for electric and electrical devices.

Alternatively it can be returned to the seller at the moment they buy a new unit, but only at a ratio of 1 to 1.

The correct refuse collection is environmentally friendly and it helps the recycling of the materials. Any other collection procedure is unlawful and will be subject to the law in force.



Warranty

This warranty is valid for up to 2 years on materials and incorrect construction from the date of purchase.

Only units with a fully completed warranty slip and original till receipt will be valid. You must supply the entire unit with accessories in the event of a warranty claim. We will then inform you on receipt of the product whether the unit will be either repaired or replaced.

We accept no responsibility for damage as a result of incorrect use of the unit. Any breakages of parts not due to defects are not covered by this warranty.

Dealer stamp:

Date of purchase:



Aquadistri UK Ltd
SG19 3AR.
www.fishkeeper.co.uk
Made in China