

SAVE THESE INSTRUCTIONS



This product is guaranteed as free from defects in materials and workmanship for a period of 1 year from the date of purchase.

The guarantee covers only any defects caused during normal use and operation of the heater, in accordance with the instructions enclosed. It does not apply to any unauthorised modifications or misuse, improper or inadequate maintenance, or operations outside of the product specifications. In case of defect within the stated warranty period, the product should be returned, with proof of purchase, to the point of purchase.

This guarantee does not affect your statutory rights. Guarantee service includes repair or replacement of the heater at Interpet Ltd's discretion. Neither Interpet nor the manufacturer are liable for an direct, indirect, special, incidental or consequential damages, including loss of livestock, arising from a defect in this product.

This product must not be disposed of with household waste. This product has to be disposed of at an authorised place for recycling of electrical and electronic appliances.

## GUARANTEE

## NEED HELP?

To ensure aquarium success visit our website for support, advice and helpful top tips on our products and fish keeping.

[www.fishkeeper.co.uk](http://www.fishkeeper.co.uk)



Scan the QR code with your smart phone or tablet to visit our website and learn more about fishkeeping and setting up your aquarium



Scan the QR code with your smart phone or tablet to visit and like our Facebook page



### Consumer Advice contact details:

Interpet Ltd.  
 Consumer Advice Department,  
 Vincent Lane, Dorking, Surrey RH4 3YX  
 Email: [customercare@interpet.co.uk](mailto:customercare@interpet.co.uk)

[www.interpet.co.uk](http://www.interpet.co.uk)

- This appliance should only be used by adults.
- Do not allow children to play with the appliance.
- Cleaning and user maintenance should only be carried out by adults.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- **WARNING:** Unplug or switch off all appliances in the aquarium before carrying out maintenance.
- Keep the appliance and its cord out of the reach of children less than 8 years of age.
- Be sure to let the appliance cool down before maintenance and unplug it from the wall socket.
- Be sure that when the appliance is in operation it remains fully submerged.
- Do not attempt to repair or make any modifications to the appliance.
- The maximum operating depth of the appliance is 12m.
- Only to be used indoors in aquariums only.

## IMPORTANT SAFEGUARDS



 
## AQUATROPIC HEATER QUICK START GUIDE



50, 100, 200 & 300W

## IMPORTANT SAFETY INSTRUCTIONS

# GETTING TO KNOW YOUR HEATER

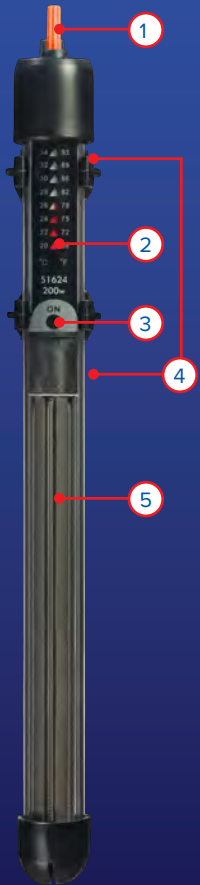

Part	Part Description
1	Temperature dial
2	Temperature Indicator
3	On/Off light
4	Correct position of suckers and clips
5	Metal heating element

Size	For Aquarium size		Aquarium length		Power
	Litres	Gallons	cm	Inches	Watts
50w	23-45	5-10	46	18	50
100w	45-90	10-20	61	24	100
200w	90-180	20-40	91	36	200
300w	135-270	30-60	122	48	300

## MAINTENANCE

 
- Switch off and unplug the heater, then allow to cool for 10 minutes before removing from the aquarium.
- Clean the heater using fresh, clean water.
- Reinstall the heater into the aquarium at the 45° angle – ensuring the heater is positioned below the minimum water line.
- Then turn the power for the heater back on.

## INSTALLATION

Set the temperature using the dial on the top of the heater. For tropical species it should be set between 23°C and 26°C.



Using the suckers provided, install the heater into the aquarium in an area of high flow and ensuring it is positioned below the minimum water line of the aquarium. Position the heater at a 45° angle to get the best heating affect.

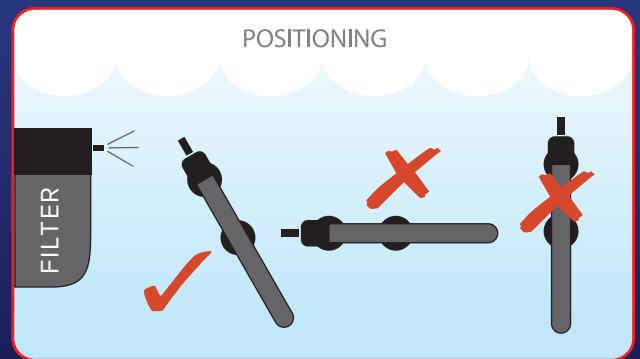


Once the aquarium is filled with water, turn the heater on at the power supply. The red indicator light will turn on to show the heater is on, and will then turn off once the water has reached your set temperature.

### Important:

 This heater is designed to be used fully submerged, to a maximum depth of 1.2m.

To prevent any drips of water from entering the electrical socket, a drip loop for the heater cable should be created.

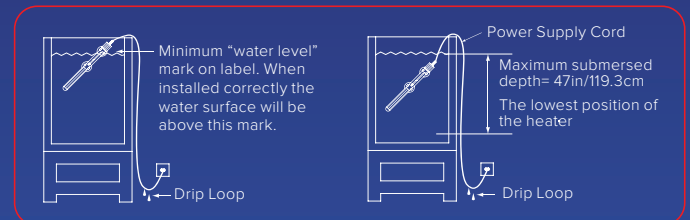

### Top tip...

...a small amount of condensation might appear on the inside of the glass, this is normal and won't effect the performance of the heater.

**SAVE THESE INSTRUCTIONS FOR FUTURE USE**