

ICD Heater Pro 200W

(Aqua

Submersible Heater And Thermostat With LCD Temperature Display

User Manual



Safety

- The ambient temperature outside
 of the aquarium may impact the
 efficiency of the heater. If the
 ambient temperature is either
 low or fluctuates dramatically,
 it may be advisable to upgrade
 your heater to a larger wattage to
 ensure that it is able to maintain
 the required tank temperature.
 Avoid setting an unnecessarily
 high temperature on the
 thermostat in order to achieve
 the correct temperature inside
 the aquarium.
- 2. Read user manual carefully before use
- 3. Only suitable for indoor aquarium use.
- Ensure voltage shown on the label matches the mains supply voltage.
- Do not insert the plug in the socket when the heater is not in the water.
- Do not remove the heater from the water when the plug is in the socket.
- Before removing the heater from the tank remove the plug from socket and let the heater cool down for 15 minutes.
- The water level must be at least at or above the minimum water level mark on the heater.
- Always check the temperature of the water with a thermometer. The temperature setting on the heater may vary.
- In the event of damage to the cord or plug do not use the heater and discard it.
- Always disconnect all power to the aquarium before placing your hands in the aquarium water.

- 12. In the event of the heater glass becoming cracked or leaks occurring, firstly remove the plug from the socket then remove the heater from the aguarium.
- Cracking of the heater glass is not covered by the guarantee. It is not possible to repair cracked glass.
- 14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Special care should be taken with the use of electrical equipment by or near children.

Installation

 Place the heater in the aquarium, attaching it to the glass using the suction cups and ensuring the heater is fully submerged as per fig 1 below and not partly submerged as per fig 2. The heater should be positioned either next to the filter or where there is good water flow so that the heated water can be distributed evenly throughout the aquarium.





- Leave the heater in the water for at least 5 minutes before plugging the heater into the socket. This allows the unit to adjust to the temperature of the aquarium before operation.
- Plug the heater into the socket, taking care to ensure that water or splashes of water cannot reach the socket. It is advisable to add an anti drip-loop in the cable to prevent possible water return. After 2 seconds the temperature of the aquarium water will show on the display.
- 4. Press and hold down the in-line switch for 2 seconds. The LCD display will start flashing to display the 'Set Temperature'. By pressing the in-line switch thereafter repeatedly, the required temperature can be set. The temperature value will increase by 1°C increments (from 17°C to 34°C). When the required temperature has been reached. let go of the switch and after a further 3 seconds the display will stop flashing and once again display the current aquarium temperature.
- 5. If at any time you wish to check the 'Set Temperature' press and hold the in-line switch for one second. The 'Set Temperature' will display for 3 flashes and then return to display the static aquarium temperature once
- Special care should be taken with the use of electrical equipment by or near children.



Dirt, limescale deposits and algae can accumulate on the glass of the LCD Heater PRO. Clean the heater regularly using a sponge and a descaling agent. After cleaning, rinse thoroughly with tap water before placing back in the aquarium.

Technical Information

- 1. LCD display
- 2. Heating element
- 3. Protective casing



 Model
 Volume
 Length

 200W
 up to 200 litres
 27cm

 300W
 up to 300 litres
 27cm

 500W
 up to 500 litres
 30cm

Condensation

It is normal to have a small amount of condensation visible within the heater glass. This is due to the manufacturing process and does not affect the operation of the aquarium heater

Recycle information

The symbol of the barred bin printed on the product means that it must be collected separately from other rubbish when it is no longer operational.

The user, at the end of the life of the product, will have to bring it to a proper rubbish collection centre for electric and electrical devices

Alternatively it can be returned to the seller at the moment you buy a new unit, but only at a ratio of 1 to 1.

The correct refuse collection is environmentally friendly and it helps the recycling of the materials. Any other collection procedure is unlawful and will be subject to the law in force.

IMPORTANT NOTE

The LCD Heater PRO does not have an Auto Shut Off function. It is therefore essential to switch off the heater when carrying out water changes or removing the heater from the aquarium. If the heater is not switched off when water changes are being carried out the heater may malfunction or crack, resulting in dangerous aquarium temperatures. This is NOT covered by the Warranty.

Warranty

This warranty is valid for up to 2 years on materials or any manufacturing defects from the date of purchase.

Only units with a fully completed warranty slip and original till receipt will be valid. You must supply the entire unit with accessories in the event of a warranty claim. We will then inform you on receipt of the product whether the unit will be either repaired or replaced.

We accept no responsibility for damage as a result of incorrect use of the unit. Any breakages of parts not due to defects are not covered by this warranty.

> Be kind to your fish and the environment - never let any animals or plants from your aquarium or pond get into the wild.

Dealer stamp:

Date of purchase:

(6



Aquadistri UK Ltd SG19 3AR. www.fishkeeper.co.uk Made in China



